




217 BRADLEY




21704L - LAF CHAIR




21704R - RAF CHAIR




21710 - ARMLESS CHR




17602 - OTTOMAN




21782L - LAF CHAISE

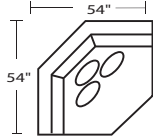


21711 - SEATING WEDGE




21716 - SWIVEL ARM CHAIR

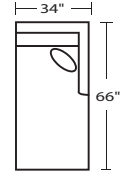


17682R - RAF CHAISE

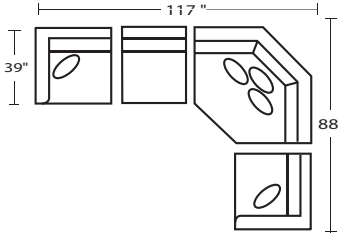


21704L / 21710 / 21711 / 21704R

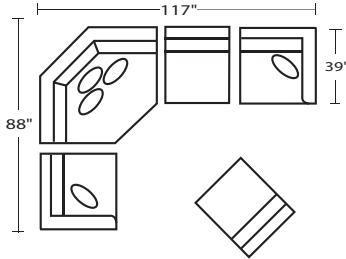


21704L / 21711 / 21710 / 21704R / 21710

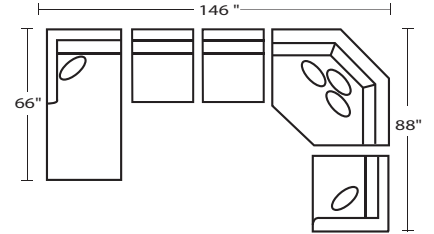


21782L / 21710 / 21710 / 21711 / 21704R

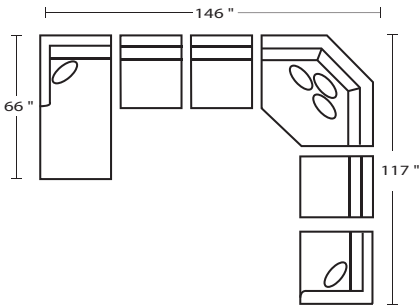


21782L / 21710 / 21710 / 21711 / 21710 / 21704R

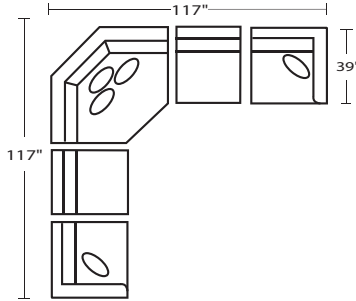


21704L / 21710 / 21711 / 21710 / 21704R

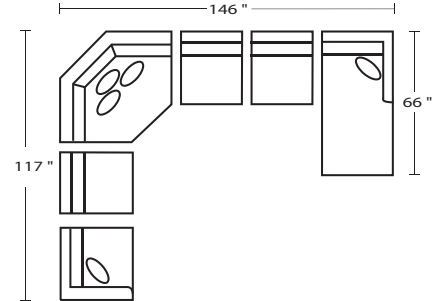

21704L / 21710 / 21711 / 21710 / 21710 / 21782R

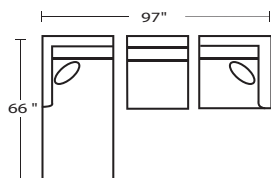

21782L / 21710 / 21704R

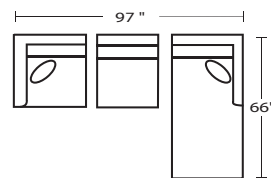

21704L / 21710 / 21782R

