




376 LAUREN




37630 - SOFA




37620 - LOVESEAT




37601 - ARM CHAIR




37602 - OTTOMAN




37610 - ARMLESS CHR




37604L - LAF CHAIR

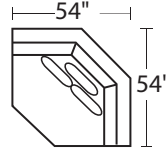


37611 - SEATING WEDGE




37604R - RAF CHAIR

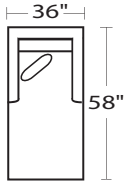


37629 - CHAISE

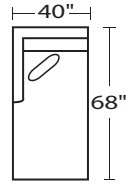


37682L - LAF CHAISE

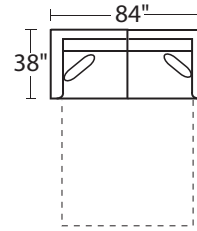


37631 - QUEEN SLEEPER

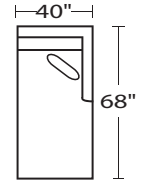


37682R - RAF CHAISE

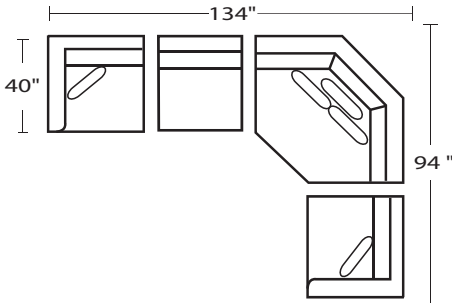


37604L / 37610 / 37611 / 37604R

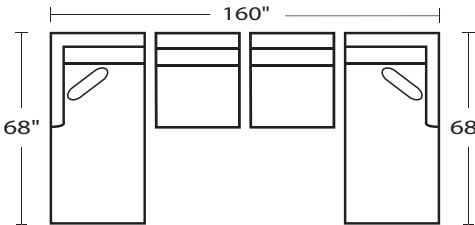


37682L / 37610 / 37610 / 37682R

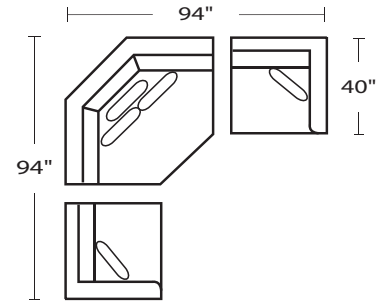

37604L / 37611 / 37604R

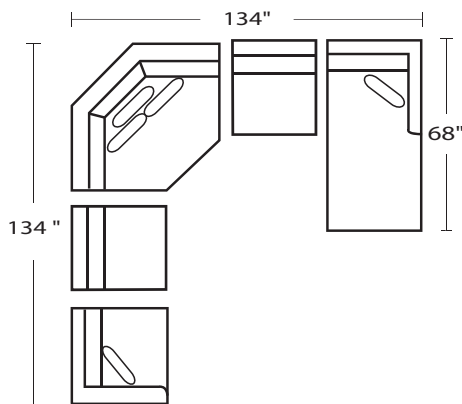

37604L / 37610 / 37611 / 37610 / 37682R

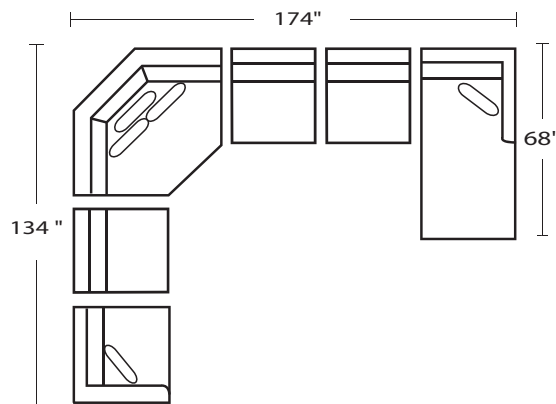

37604L / 37610 / 37611 / 37610 / 37610 / 37682R

* DIMENSIONS ARE APPROXIMATE

